

 
QVT1 Video Telephone

User instructions


Contents


3. Basic operation
 - Receiving a call
 - Admitting a visitor
 - 2nd camera view
 - Ring mute
4. Accessing the extras menu
5. Accessing the settings menu
6. Setting the date and time
7. Viewing your call history
8. Installing an SD card
9. Memory management
10. Changing your ring tone
11. Setting the ringing volume
11. Setting the brightness, colour and contrast

Basic operation

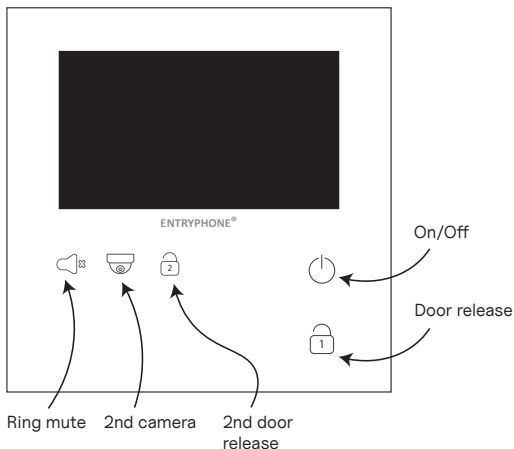

Receiving a call


When the unit receives a call from the door, the icons will illuminate and the LCD screen will activate allowing you to see the caller. The  icon will flash red.


To enable two-way audio, press the  button and it will change from flashing to solid.

To end the call, press the  button again.

Note; pressing the  button when the unit is off will turn it on giving a view from the door camera.


Admitting a visitor

If you are satisfied with the visitor's identity admit them by pressing the "Door release"  button.


In systems with a second entry point, such as an automatic vehicle gate, use the "2nd door release"  button.

Note; The door release buttons will only work when the monitor is active.


2nd camera view

If your system is fitted with a second camera (the first is the one fitted in the entrance panel), pressing the "2nd camera"  button will switch to that view, pressing it again will return to the entrance unit camera.



Ring mute

If you wish not to be disturbed, press the "Ring mute"  button. The indicator will illuminate red, silencing incoming calls. To disable the mute feature, press the button again.

EXTRAS menu

While the unit is in its standby mode (i.e. when the LCD screen is off), press and hold the camera button  for approximately 3 seconds. This will give you access to the additional features and other setup options.

To enter "EXTRAS" mode, press and hold the camera symbol for 3 seconds.

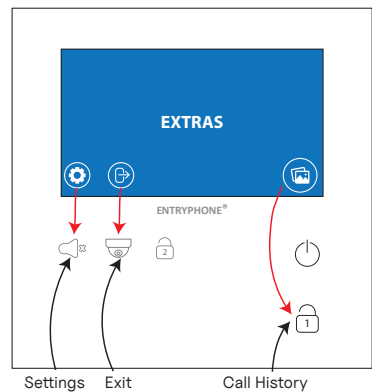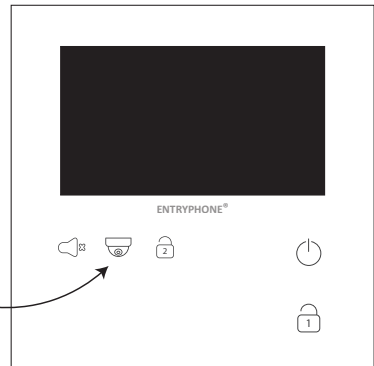


Please note that the LCD screen is not touch-sensitive. When using extra features or adjusting settings, the functionality of buttons is determined by the on-screen icons, which adapt according to the current context.


To exit, press the  button to switch the unit off.

Note; if there is no activity on the unit for 20 seconds it turns itself off.


SETTINGS menu

follow the steps to the EXTRAS menu on page 4

To access the “SETTINGS” menu follow the procedure **set out on page 4** to bring up the “EXTRAS” screen and then press the  button to open the settings menu.

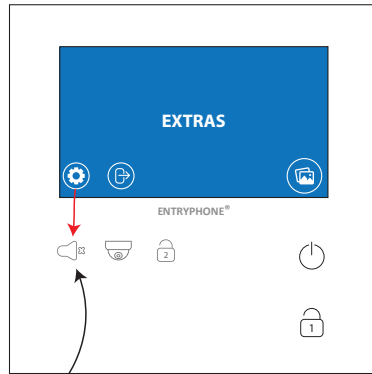

To view the settings menu, press the “ring mute” button

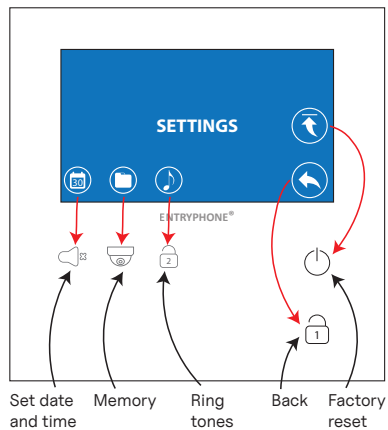


Within the settings menu, you can adjust various parameters such as the unit’s time and date, configure picture and video memory settings, change the ring tone, and reset the unit to its factory defaults. Each process is described in detail in the following pages.


To exit the settings menu, press the  back button repeatedly until the unit returns to the “EXTRAS” screen.




Setting Date and Time


follow the steps to the SETTINGS menu on page 5



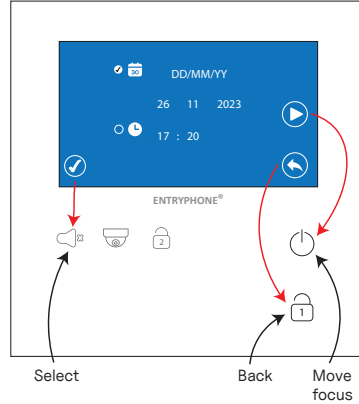


While it's not mandatory to adjust the date and time on the unit for basic functionality, it's prudent to do so if you plan to use the call-log feature. Setting the unit to the correct date and time ensures that any captured image or video is accurately time-stamped.

 To reach the time and date edit screen press the  button on the settings menu.

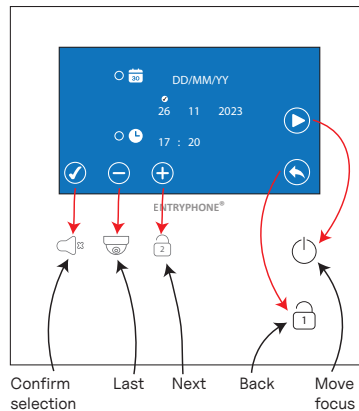

To adjust the time/date parameters first press the  button to move the focus to either the date or time (the tick  will move to indicate it is selected) and then press the  button to select.

 



To adjust each number press the  button to move the focus (the tick  will move to indicate what is selected) and then use the  and  buttons to change the number incrementally followed by the  button to confirm.





Call History

follow the steps to the EXTRAS menu on page 4

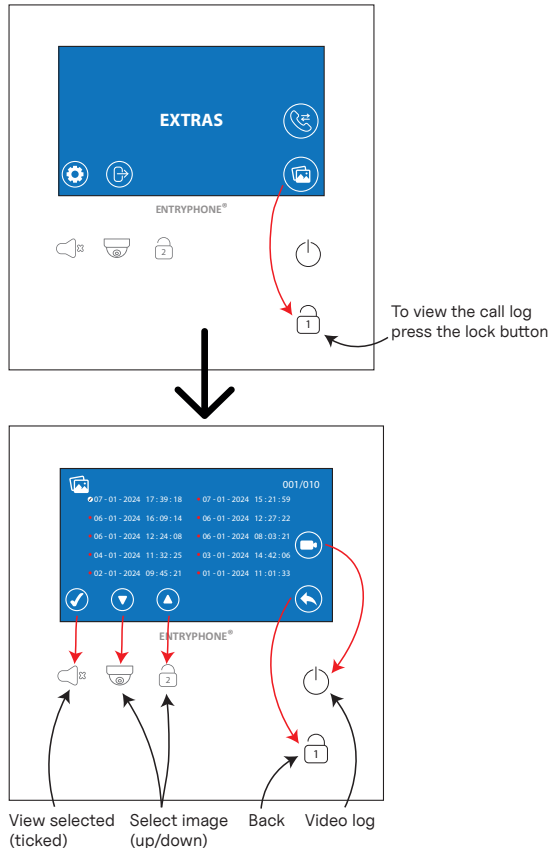Whenever the monitor receives a call, it automatically captures a snapshot of the person who pressed the button on the door unit. This image is time-stamped and saved either to the unit's internal memory or to the micro SD card if one is fitted.

 
To access the call log, enable "EXTRAS" mode as described on page 4 and then press the  button.



In the call history the most recent captured image is the first in the list and marked with a . To move the selection use the  and  buttons and then the  to view your chosen image.

The unit stores the last 100 pictures in its memory. When the memory is full, it automatically overwrites the oldest picture.

Call history (continued)

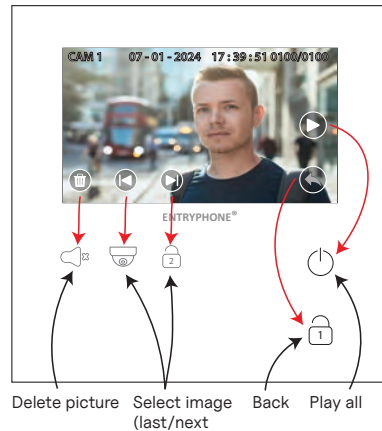

To navigate through the other images use the  and  buttons.

To delete a picture from the memory press .

To quit, press the back button  until the unit returns to the EXTRAS screen.

Micro SD memory card

Located on the rear of the monitor is a slot designed to accommodate a micro SD card. By inserting a class 10, 8-128GB SD card into this slot, you can configure the unit to capture 15 seconds of video/audio each time you have a visitor.

To install the SD card, follow these steps carefully:

1. Firmly push the monitor upwards to detach it from its wall bracket, taking care not to tug on any connected wiring.
2. Rotate the monitor to access the rear side where the SD card slot is located.
3. Insert the micro SD card into the slot, ensuring it is properly aligned.
4. Refit the monitor back onto the bracket, pressing down to ensure it's securely seated.




Before you can use the SD card for video capture, it's essential to format it following the instructions provided on page 9 of this manual. Once formatted, follow the instructions to enable the video capture feature.


Memory management









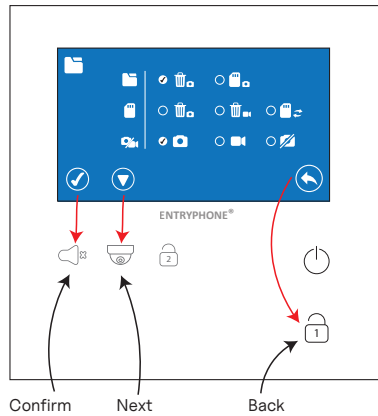





follow the steps to the SETTINGS menu on page 5

To reach the memory screen press the  button from the settings menu.

By default, the unit stores the call history as still images of callers on its internal memory but, if desired the unit can be set to capture 15 seconds of video of callers (an SD card needs to be fitted).

To navigate to an option press  to move the focus, indicated by the  and press the  confirm your selection.




Internal memory	   
	Delete images Copy to SD card
SD card memory	    
	Delete images Delete video Format SD card
Capture mode	    
	Capture stills Capture video Do not Capture






Change ring tone

follow the steps to the SETTINGS menu on page 5

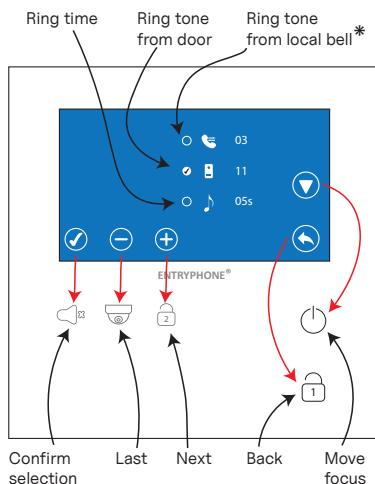To reach the ring tone screen press the  button from the settings menu.

By default, the unit is configured with a standard warble ring tone that plays for 5 seconds when a caller presses the button on the entrance unit. There are, however, an additional twelve ring tones available and the ring time can be set to either 5, 10, 20, or 30 seconds.






To change either the ring tone, or ring time, press the  button to move the focus to that option (the tick  will move to indicate it is selected). Use the  and  buttons to move to the next or last choice. With the ring tone you will hear the selected tone. Once satisfied with your selection press the  button to confirm.

To quit, press the back button  until the unit returns to the EXTRAS screen.


*** Local bell is only used if the unit is connected to an apartment's own door door bell push.**



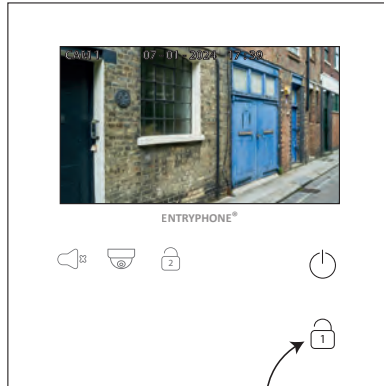

Ring Volume, Brightness, Colour and Contrast

To access the brightness, colour, contrast and ring volume settings menu, turn the monitor using the  button on and then press-and-hold the  button until the menu icons appear overlaid on the video image from the door.

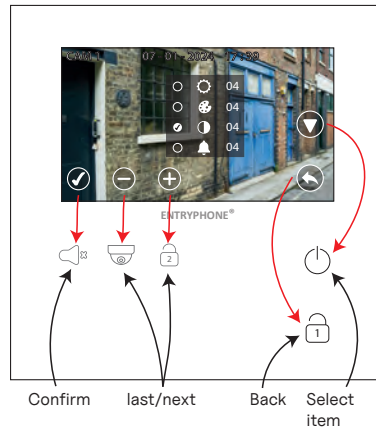

Press and hold the lock button until the brightness, colour, contrast and volume icons appear



Use the  button to move the focus (the tick  will move to indicate what is selected) and then increase or decrease the setting, using the  and  buttons. As you change the brightness, colour or contrast the background on the screen will change accordingly. When changing the volume of the ringer the sound will play.

Once satisfied with your selection press the  button to confirm.

To quit, press the back button  until the unit returns to the EXTRAS screen.

The Entryphone Co Ltd
23 Granville Road
London SW18 5SD
020 8870 8635
entryphone.co.uk

